

WALLCOVERING

LI&PRA[®]

INNOVATION AND DESIGN

WALL HYDRO

POSA E MANUTENZIONE
INSTALLATION AND MAINTENANCE

SKIN  WALL

COLLEZIONE WALLCOVERING **SKINWALL**
SKINWALL WALLCOVERING COLLECTION



1 PRIMA DELL'INSTALLAZIONE


I pannelli WALL HYDRO possono essere montati a parete, anche in maniera diretta su rivestimenti in piastrelle di ceramica esistenti (purché con discontinuità inferiori a 2 mm/ml), in bagno, cucina, lavanderia, soggiorno, uffici, palestre, locali commerciali, caravan, barche, ecc. I pannelli sono particolarmente adatti per gli ambienti umidi.

I pannelli non devono essere installati all'esterno, in locali con temperature sopra ai 60°C o sotto ai -10°C o su pareti con temperature superiori ai 60°C. Si raccomanda di trasportare e conservare i pannelli sdraiati. La temperatura ambiente ideale prima e durante l'installazione è di circa 20 °C. Non esporre i pannelli alla luce diretta del sole prima dell'installazione. Per garantire l'impermeabilità dei pannelli è necessario applicare sempre un sigillante elastico negli angoli di congiunzione fra i pannelli e gli eventuali profili di chiusura, ma anche tra i pannelli ed il bordo della doccia o della vasca da bagno. La garanzia di impermeabilità si applica solamente ai pannelli: la corretta posa degli stessi può essere garantita unicamente dall'installatore.

2 INSTALLAZIONE E CURA DEI PANNELLI

I pannelli WALL HYDRO possono essere facilmente assemblati tra loro sfruttando l'incastro T&G (e il clic nella versione SMALL) e si installano con colla.

Per la posa, nel caso di utilizzo della colla Ultrabond Eco MS 4 LVT Wall applicarla a spatola dentata su tutta la superficie della parete, dopodiché installare il pannello mentre, nel caso di utilizzo della colla Ultrabond Eco MS Easy, applicarla a zig-zag sul retro del pannello, dopodiché procedere all'installazione (fig 1).

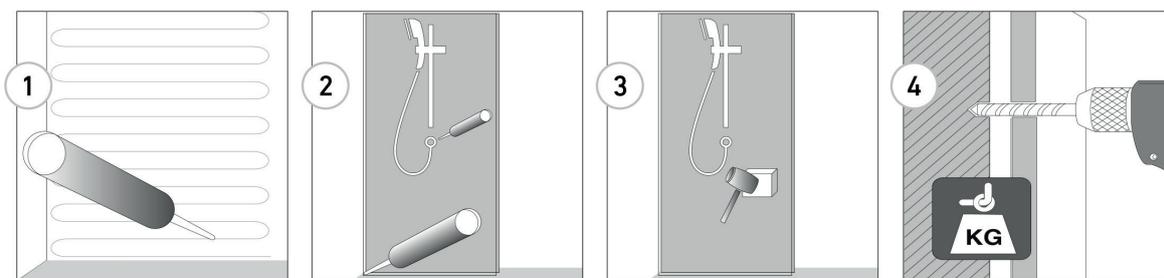

Fissare il primo pannello alla parete piana e, in caso di montaggio accostato di più pannelli, procedere affiancando i successivi, utilizzando gli incastri (T&G e click, dove presente). In caso di installazione a partire dal terreno i pannelli devono essere a filo con il pavimento. Assicurarsi che i pannelli siano sempre allineati orizzontalmente.

Sigillare i bordi superiori ed inferiori di tutte le lastre e, se serve, applicare dei profili di chiusura specifici. Sigillare i ritagli ed i fori con il sigillante elastico per giunti (fig 2). Battere l'intera superficie con un martello di gomma (utilizzare uno spessore per proteggere i pannelli) e controllare il posizionamento con un regolo (fig 3).

Per fissare ai pannelli accessori pesanti, come ganci per cappotti, luci, specchi, ecc. forare i pannelli ed utilizzare viti e tasselli adatti per il muro (fig 4).

Per la pulizia: si consiglia di utilizzare il prodotto Hydro Clean, disincrostante neutro specifico che elimina tutte le incrostazioni di natura inorganica (calcare).

1/ Before installation

WALL HYDRO panels can be mounted on the wall, even directly on existing ceramic tile coverings (provided with discontinuities of less than 2 mm/ml), in the bathroom, kitchen, laundry room, living room, offices, gyms, commercial premises, caravans, boats, etc. The panels are particularly suitable for damp rooms.

The panels must not be installed outdoors, in rooms with temperatures above 60°C or below -10°C or on walls with temperatures above 60°C. It is recommended to transport and store the panels flat. The ideal ambient temperature before and during installation is around 20 °C. Do not expose the panels to direct sunlight before installation. To guarantee the waterproofing of the panels, it is always necessary to apply an elastic sealant in the corners of the junction between the panels and any closing profiles, but also between the panels and the edge of the shower or bathtub. The waterproofing guarantee applies only to the panels: their correct installation can only be guaranteed by the installer.

2/ Panel installation and maintenance

The WALL HYDRO panels can be easily assembled together using the T&G joint (and the click in the SMALL version) and are installed with glue.

For installation, if using Ultrabond Eco MS 4 LVT Wall glue, apply it with a notched trowel over the entire surface of the wall, then install the panel while, if using Ultrabond Eco MS Easy glue, apply it in a zig-zag pattern on the back of the panel, then proceed with the installation (fig 1).

Fix the first panel to the flat wall and, in case of mounting several panels, proceed side by side, using the joints (T&G and click, where present). If installing from the ground, the panels must be flush with the floor. Make sure the panels are always horizontally aligned.

Seal the upper and lower edges of all the slabs and, if necessary, apply specific sealing profiles. Seal cutouts and holes with elastic joint sealant (fig 2). Tap the entire surface with a rubber mallet (use a shim to protect the panels) and check the positioning with a ruler (fig 3).

For attaching heavy accessories to panels, such as coat hooks, lights, mirrors, etc. drill the panels and use screws and dowels suitable for the wall (fig 4).

For cleaning: we recommend the use of Hydro Clean, a specific neutral descaling agent that removes all incrustations of an inorganic nature (limescale).



LI&PRA S.P.A.

Via Prandi, 1 - 42019 Bosco di Scandiano (RE) - ITALY
Tel. +39.0522.856991 - Fax +39.0522.855683
info@li-pra.com

www.li-pra.com